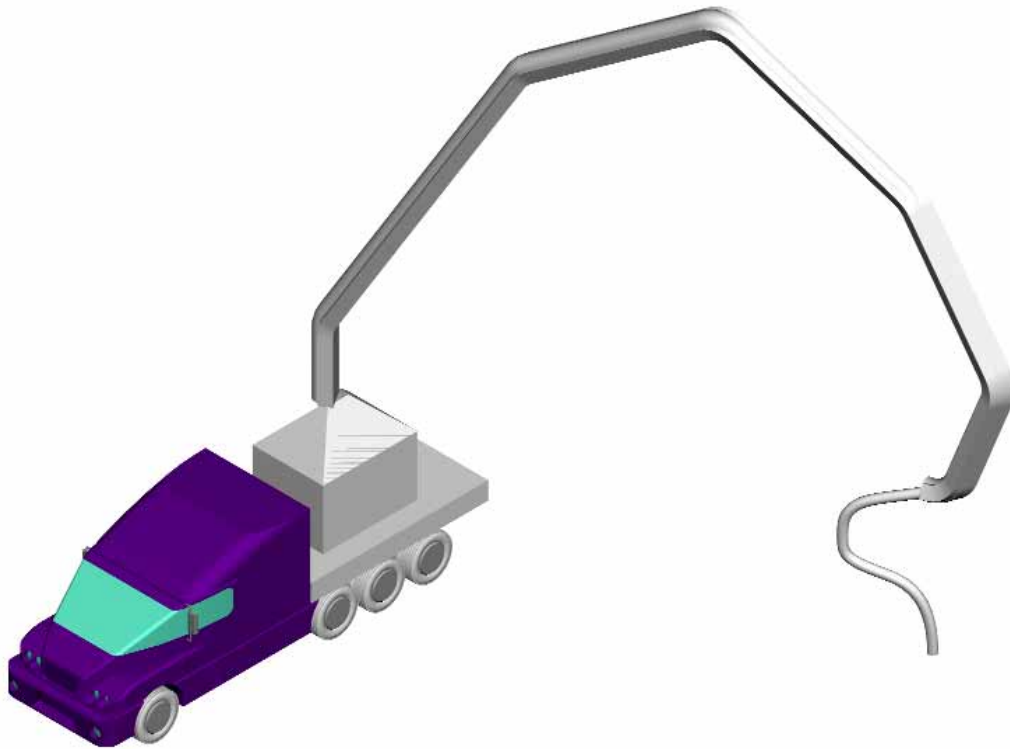


## 9. Ninth Phase: Ordering the concrete pouring equipment

The best way to place concrete in structural members below grade is to use concrete pump.



**Figure 9.1**

Concreting the above-grade walls requires lifting devices. The most widely used is boom pump due to its flexibility. Order one pump with a line reduction to 75mm (3") and two 90° angles at the end (as "S"). This allows the deceleration of the concrete flow.

